

ChemScan[®] Alkalinity Analyzer


Reliable Alkalinity Analysis in Wastewater

The new ChemScan Alkalinity Analyzer from ASA Analytics provides consistent, reliable chemical analysis for process control and optimization in multiple stream process monitoring and/or difficult or dirty samples.

The ChemScan Alkalinity Analyzer is easy to operate and maintain with minimal training and provides continuous real-time online analysis enabling chemical composition measurement of liquid processes.

FEATURES

- Fully automatic mode for routine monitoring of process streams
- Integrated, field proven, filtration system
- Mod bus RS 232, Mod bus RS 485, Mod bus TCP/IP communication for downloading calibrations, analysis and setup data (to printer or computer)
- Digital input control for remote-control operation of analysis and calibration
- Rugged design for long life under harsh operating conditions
- Internal sample fast loop and rapid reaction electrodes provide fast analyzer response for efficient process control
- Easy to operate with menu-driven selections
- Modular design provides quick access and easy maintenance throughout

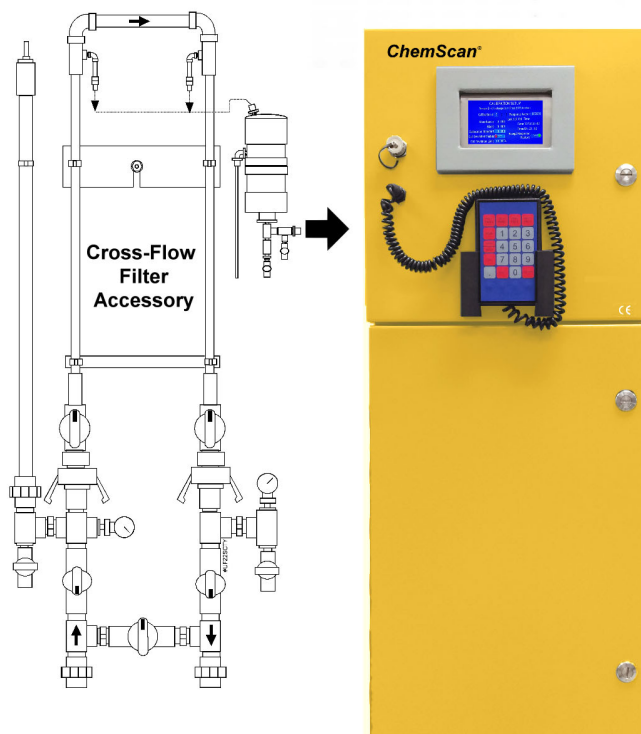

The ChemScan Alkalinity Analyzer can perform single or dual end-point titrations and is equipped with three detection methods (fixed, relative, and derivative endpoint) to ensure flexibility and accuracy. Analyses are fully automatic. Users can easily change the frequency of analysis and calibration, as well as most default values, to improve or customize a setup. Automatic calibration is user-selectable and configurable with calibration repeat and alarm limits. The analyzer also features a full auto-cleaning capability for reliability and reduced maintenance.

Regular wastewater stream: alkalinity, zinc and aluminum
Sidestream wastewater: high range ammonia and phosphate.
Many other titration analysis parameters are possible, contact factory for additional information.

asa
ANALYTICS
"Monitoring a World of Water"

Applied Spectrometry Associates, Inc.
2325 Parklawn Drive, Suite I, Waukesha, WI 53186
262-717-9500, Fax 262-717-9530

www.asaAnalytics.com